



CONSUMER CREDIT FOR ECOMMERCE

eSignature Pad & Stylus Setup Guide v1.0

eSignature Pad & Stylus – Installation & Setup

The eSignature pad is based on Wacom's Bamboo product (models CTL-460/K, CTL-470/K are supported), a low cost, reliable USB device with proven cross platform software support and a high sample rate.

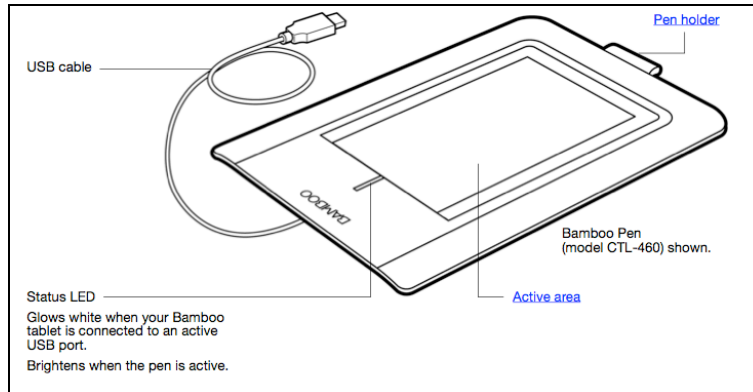


Figure 1: eSignature pad

Please carefully follow the instructions below to install and configure your e-signature pad for use with Pay4Later's in-store credit application process.

1. Unpack the unit and connect to your computer using the USB cable provided.
2. Close all open applications on your computer and disable anti virus software.
3. Position the eSignature pad for either left or right-handed operation.
4. Insert the installation CD into your computer and install the driver software.
5. Open the control panel and ensure the following settings (as shown below in figure 1) are selected:
 - a. Tracking is set to **Pen Mode**
 - b. **Pen Buttons** are both disabled

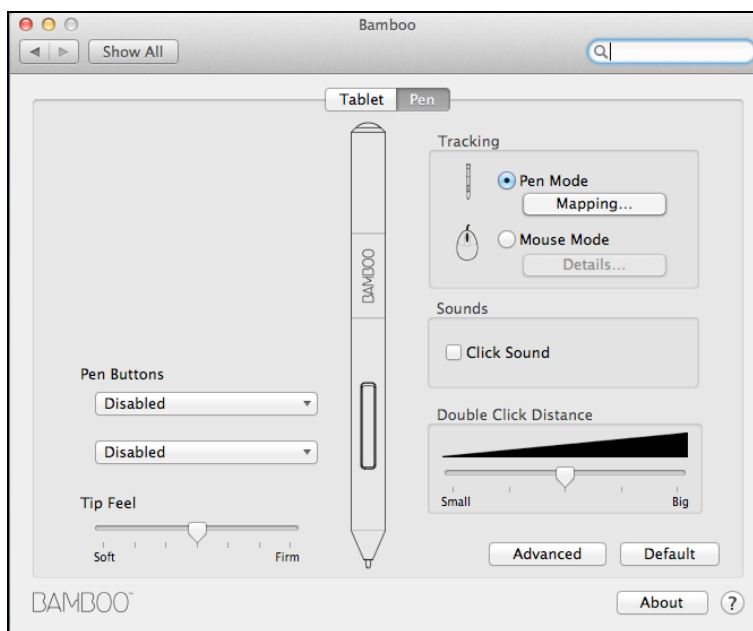


Figure 2: control panel, pen settings

Click on Tablet to change the orientation:

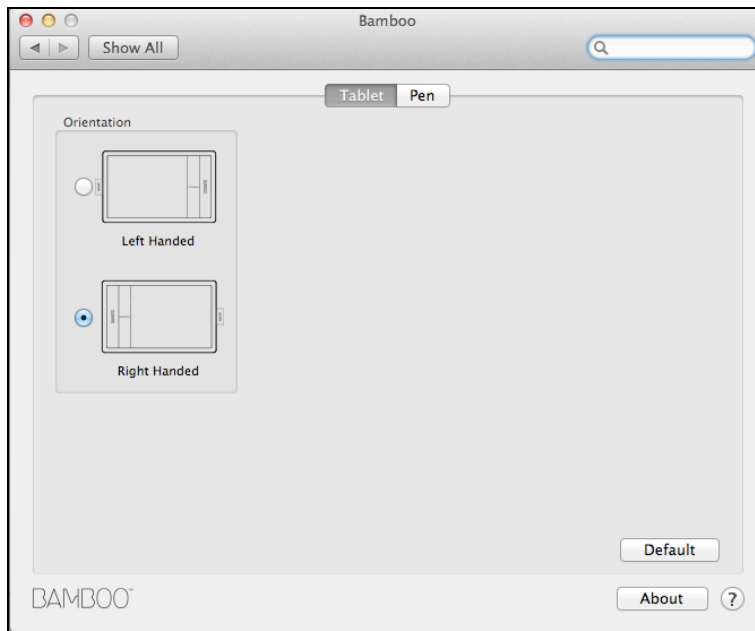


Figure 3: control panel change orientation

Please use the eSignature test page on Retailer BackOffice (Resources & Training tab) to test that your eSignature tablet is operating correctly.

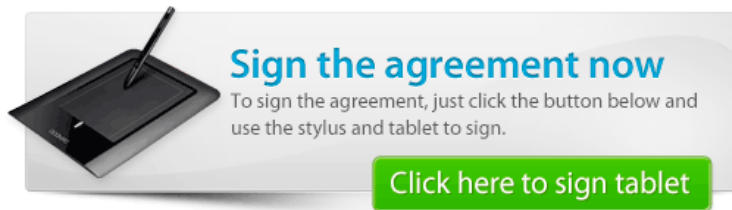


Figure 4: eSignature test page on BackOffice

You can practice signing as many times as you like. This page is identical to the one used by customers on the in-store credit application process.



Figure 5: eSignature test page

Use the pen holder to store the pen when it is not in use.

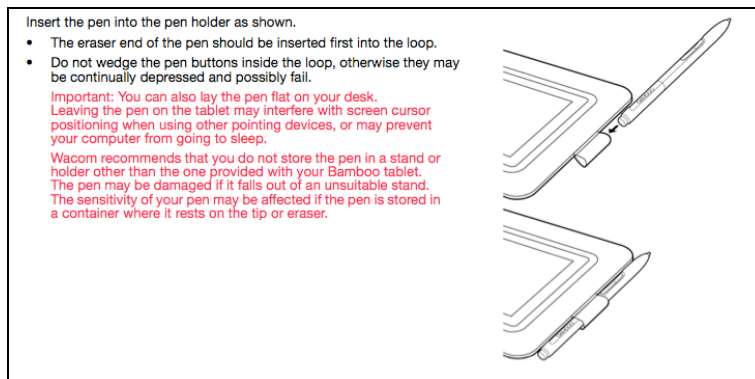


Figure 6: pen holder

Replacing the pen nib.

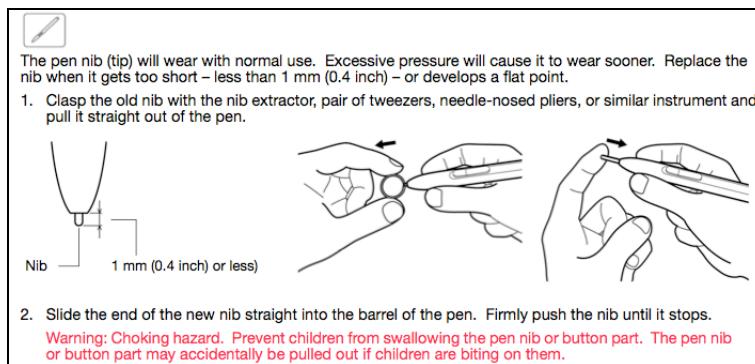


Figure 7: Pen Holder

If you have any questions contact your account manager. Alternatively please email retailersupport@pay4later.com or call us on 0800 021 7150.